



NTS

NEW TOUCH SYSTEM

USER MANUAL

Smartphone app
available on:



QUALITY MADE IN
GERMANY

NTS

NEW TOUCH SYSTEM

Manufacturer

PRO-AQUA International GmbH
Technologiepark 6
91522 Ansbach/Germany

Tel.: +49 (0) 981 / 48 78 8-0

Fax: +49 (0) 981 / 48 78 8-99



PRO-AQUA
INTERNATIONAL

www.pro-aqua.com

Type: Pro-Aqua NTS Σ 800 W
650 W 220 - 240 V
150 W 50Hz/60Hz

Serial-Nr.:
NTS100001

Hersteller: PRO-AQUA International GmbH,
Technologiepark 6, 91522 Ansbach/Germany



NTS1234567890



CONTENT OVERVIEW

1 - General Information

Safety instructions	6
General description	10
Standard accessories	12
Assembly instructions	14
Preparation	16

2 - The functions

Basic functions	
Operating via Display or app	20
Basic functions	22
Standard accessories	23
Further functions	
Wet vacuuming	25
Blow function	26
Vacuuming	26
Care instructions	27

3 - Additional Accessories

Accessories	
Special accessories	30
airvenue® air freshener	35
Electric nozzle direct contact	36
Spray extraction kit	38

1

2

3



SAFETY INSTRUCTIONS

Before operating the NewTouchSystem, please read all instructions carefully.

Your NewTouchSystem should only be used for the purposes described in this user manual. Use only attachments, consumables or spare parts supplied by the manufacturer. The use of additional equipment not recommended by the manufacturer can be dangerous.

WARNING – To reduce the risk of fire, electric shock, or injury:

1. Always disconnect the power plug before cleaning and drying the room cleaning system.
2. Do not use the room cleaning system without the separator.
3. Do not use the room cleaning system without water.
4. In case of heavy contamination, change the water in time.
5. Clean the room cleaning system and the separator at regular intervals.
6. Children shall not play with the room cleaning system. Cleaning shall not be made by children without supervision. Close attention is necessary when used by or near children.
7. The room cleaning system shall not be used to vacuum materials that do not form a bond with water. Do not use the room cleaning system to vacuum up large quantities of mineral dust, soot, gypsum, construction debris, etc. Do not vacuum up concentrated amounts of dust.
8. Do not vacuum up flammable or combustible liquids, such as gasoline, or use the room cleaning system in areas where they are present!
9. Do not vacuum up sharp-edged or hard objects.
10. Do not vacuum up cigarettes, matches, hot ashes and other smoking or burning objects.
11. Do not use the room cleaning system with a damaged power cord.
12. Do not leave the room cleaning system when plugged in. Unplug from outlet when not in use and before use. Turn off all controls before unplugging.
13. Observe the user manual and use only approved original accessories.

SAFETY INSTRUCTIONS

- 14.** Do not hold it in water for cleaning.
- 15.** DOUBLE INSULATION – When in use, apply only identical replacement parts.
- 16.** This room cleaning system is provided with double insulation. Use only identical replacement parts. See instructions for Servicing of Double-Insulated Appliances.
- 17.** The hose contains electrical wires. Do not use when damaged, cut, or punctured.
- 18.** Do not use outdoors. Use only for household.
- 19.** If your room cleaning system is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- 20.** Do not pull or carry the room cleaning system by the cord. Do not use the cord as a handle, close a door over it or pull it around sharp edges and corners. Do not run the room cleaning system over the cord. Keep cord away from heated surfaces.
- 21.** Do not unplug by pulling the cord. To unplug, hold the plug, not the cord.
- 22.** Do not plug in or operate the room cleaning system with wet hands.
- 23.** Do not insert any objects into the main unity openings. Do not use the room cleaning system with any openings blocked; keep them free of dust, lint, hair and anything that may reduce airflow.
- 24.** Keep hair, loose clothing, fingers and all parts of body away from the openings, rotating brushes or parts.
- 25.** Use extra care when cleaning on stairs.
- 26.** Always turn off the room cleaning system before connecting or disconnecting either hose or motorized nozzle.
- 27.** Unplug before connecting Motorized Cleaning Head.
- 28.** The hose shall be examined periodically for visible deterioration, such as abrasion, cracks, splits and the like.
- 29.** The hose shall be used only for indoor household carpet cleaning using only manufacturer's recommended cleaning solution. Save these instructions.
- 30.** The manufacturer declines all responsibility for damage resulting from improper use or use contrary to the instructions, unauthorised repairs or improper maintenance.

ADDITIONAL SAFETY INSTRUCTIONS

This device can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the device in a safe way and understand the hazards involved.

Children are not allowed to play with the device. Cleaning and maintenance by the user must not be carried out by children without supervision.

If the cord of this device is damaged, it must be replaced by the manufacturer, its customer service or an equally qualified person in order to avoid hazards.

Attention

To avoid electric shocks, do not expose it to rain! Do not store or use outdoors!

Type household



Double insulated


Note on environmental protection



At the end of its service life, this product must not be disposed of with normal household waste, but must be taken to a collection point for the recycling of electrical and electronic equipment.

The materials are recyclable according to their labelling.

By reusing, recycling or otherwise recovering old equipment, you are making an important contribution to protecting our environment. Please ask your local authority for the responsible disposal point.

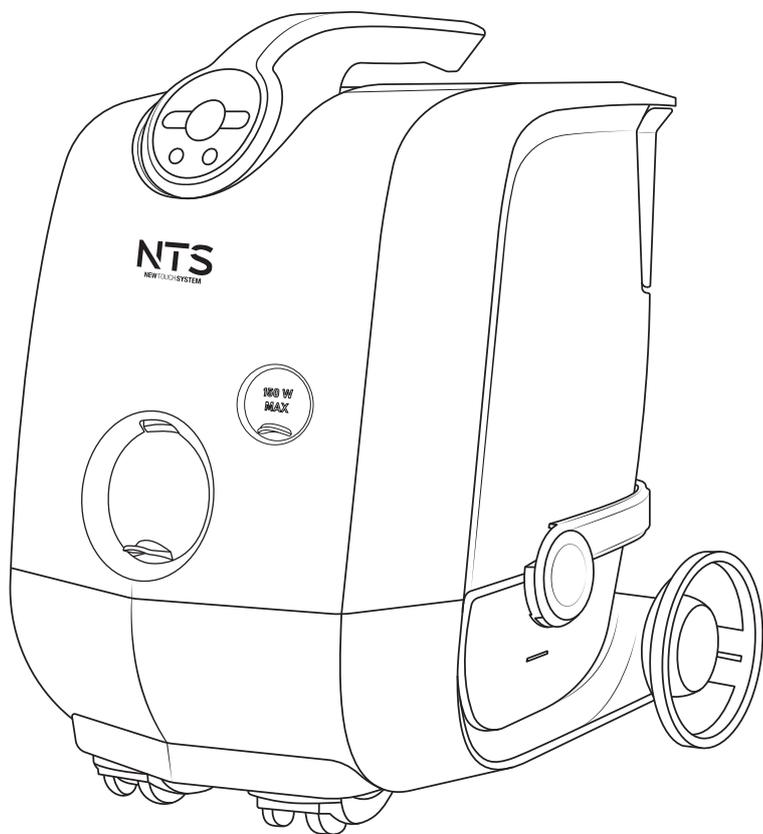

DEAR CUSTOMER!

**We would like to congratulate you
on your NewTouchSystem.**

You have purchased a product that
combines technical perfection and
functionality with a top usability and
modern design.

Please read the instructions and tips in
this user manual carefully so that you can
**enjoy your NewTouchSystem
over a long period of time.**

GENERAL DESCRIPTION

Technical Data

Type NewTouchSystem

Voltage 220 - 240 V
50/60 Hz

Power three power levels
650 watts

External dimensions approx.
30 x 41 x 45 cm
(L x W x H)



BASIC DEVICE

1. Touch-Display with on/off switch, motor regulation, timer and color switching function
2. Main unit with separator and fastening nut (left-hand thread)
3. Socket with sliding cover
4. Sliding cover for the air inlet of the suction nozzle
5. Water tank with carrying and locking handle
6. Chassis
7. Accessory drawer
8. Removable aerosol filter with additional air outlet
9. Automatic cable rewriter
10. Tank unlocking device



STANDARD ACCESSORIES

1. Transparent upholstery nozzle
2. Rotatable dusting brush
3. 4 m suction hose
incl. air regulation
4. Aerosol filter
5. NewTouchSystem
microfibre cloth
6. Eco CleanAir 100 ml
7. Joint nozzle
8. Pipe with Blow-Peak
9. Separator key
10. Stainless steel telescopic tube



SPECIFIC ACCESSORIES FOR ADDITIONAL COUNTRIES

Depending on where the product is delivered, your standard accessory is completed with one of the following nozzles. We have composed the nozzles for the special need in the delivered countries carefully. All other nozzles can be purchased separately through your personal consultant.



Switchable Floor Nozzle

The switchable floor nozzle is particularly suitable for cleaning smooth surfaces and carpets. It can be easily switched for hard floor or for carpet.



Natural hair broom

Vacuuming and sweeping in one! The natural hair broom does two tasks in one. This is because all dirt particles that are swept up with the broom are already vacuumed up at the same time.



Floor nozzle 285

This floor nozzle 285 is mainly used for thorough and gentle cleaning of smooth floors and carpets.

ASSEMBLY INSTRUCTIONS



Filling the accessory drawer

Store all your essential accessories directly in your device. The accessory drawer has special premoulded spaces for the following accessories:

1. Transparent upholstery nozzle
2. Rotatable dusting brush
3. Separator key
4. Joint nozzle
5. Aerosol filter
6. Fragrance oils (additional purchase options)



Attaching the hose to the telescopic tube

Attach the 4 m long suction hose to the stainless steel telescopic tube.



Attaching the other side of the suction hose to the air inlet

Attach the other side of the 4 m long suction hose to the air inlet, which is located underneath the sliding cover of the main unit.

Plugging the device into a power socket

Plug the power supply of your NewTouchSystem into a power socket.

PREPARATION



Lifting off the main unit

Gently press down the handle of the water tank and lift off the main unit.



Lifting the water tank off the chassis

Place the carrying handle of the water tank upward direction and press the release button on the chassis to lift off the water tank.



Filling the water tank with water

1. Fill up the water tank with 2 liters of water to the mark.
This is the amount of water your NewTouchSystem needs for all functions.
2. Make sure that the separator is properly attached.

Note

Please reassemble the individual parts of your NewTouchSystem in reverse order:

1. Install the filled water tank into the chassis
2. Place down the carrying handle of the water tank
3. Insert the main unit until the release button clicks, then lift up the carrying handle of the water tank until it clicks

THE FUNCTIONS

OPERATING VIA TOUCH DISPLAY



Regulation of power and maximum

When you touch the »POWER«-key on the display, the machine will start at lowest level. To change the power just tap the »+« or the »-« key. **NOTE:** For maximum power (displayed with blue bars on the right side) double tap the »+« key. This is normally necessary when using for wet cleaning vacuuming.



Timer function


Tap the clock key on the lower left to start a 20 minute timer. Your machine will automatically stop after 20 minutes. Simultaneously the light will turn on. To choose your favourite color see next step.



Color switch function

Tap the light key on the lower right to start the light modus. In this modus a variety of colors will show in an endless cycle. To select a specific color, wait until your favourite color appears then tap the light key again.

OPERATING VIA APP

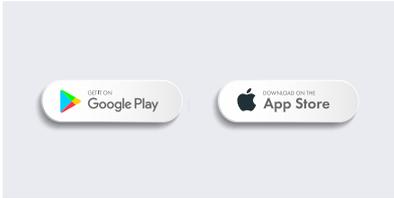

Download the app

Download the application from the App Store or the Google Play and operate your NewTouchSystem easily through the application.



Use of the app / pairing

By launching the N.T.S. application onto your device, your device will automatically be connected and the screen on your device will mirror the display on your NewTouchSystem.

Note

The functions in the app are similar to the one on the display (see page left).

BASIC FUNCTIONS OF THE NEWTOUCHSYSTEM



Air wash

1. Place your NewTouchSystem in the room and let it run for a few minutes or longer, depending on the size of the room. Your NewTouchSystem now vacuums up all the unpleasant odours and dust particles from the room air, binds them in the water and the freshly washed air exits through the air outlet.
2. According to your taste, you can add a few drops of fragrance oil into the water in the tank. After a short time, your rooms will be filled with a pleasant scent. Recommended setting for a pleasant air wash is one powerbar.



HOW TO USE THE STANDARD ACCESSORIES



Transparent upholstery nozzle

The small and proven attachment is suitable for all soft and scratch-resistant surfaces (e.g. upholstery, curtains, etc.). It allows to vacuum in hard-to-reach places without losing motility.



Rotatable dusting brush

The rotatable dusting brush is perfect for computer keyboards and other hard objects. Place the dusting brush on the handle and rub gently over the surface. The brush wipes off the dust and then you can easily vacuum it.



Crevice nozzle

This attachment makes it easier for you to clean narrow places that were difficult to reach before.

HOW TO USE THE STANDARD ACCESSORIES



Pipe with Blow-Peak

Our inflation tip is especially suitable for inflating air mattresses, paddling pools or alike. In combination with the flexible whip, it is ideal to clean radiators or inaccessible places.



Microfibre cloth

This high-quality microfiber cloth is for all-purpose use both for dry and wet cleaning, including your NewTouchSystem water tank.



Cleaning key

The wrench is used to loosen the screw from the separator slightly so that the separator with the screw can be removed and cleaned (ATTENTION: a left-hand thread).

FURTHER FUNCTIONS



Wet vacuuming

For wet vacuuming, use an empty water tank and suck in the water with the NewTouchSystem dry hose (Fig. 1).

Make sure that the water tank is not overfilled!



After each wet vacuuming, the hose must be cleaned and dried. To do this, suck in clean water, then attach the hose to the air outlet and insert the handle piece into the suction socket. Now let the NewTouchSystem run for approx. 2 - 3 minutes and that helps the hose dry (Fig. 2).

Afterwards, the device is ready for all other work again. It is recommended to set on "MAX" for wet vacuuming with the NewTouchSystem (Fig. 3).



IMPORTANT:

Do not use the power nozzle and power hose (accessories) to suck up water!



Blow function

It is ideal to blow through clogged drains or drying items. Open the air outlet grille at the rear and attach the suction hose at this opening outlet (Fig. 1)!



Vacuuming

Place the items that you wish to clean, such as pillows, comforters, stuffed animals, etc., in the vacuum bag, attach the upholstery nozzle, switch on the NewTouchSystem and vacuum the air completely.


Now remove the hose and attach it to the air outlet (blowing function). Blow fresh air into the vacuum bag - everything smells freshly washed again (Fig. 2)!



IMPORTANT:

The NewTouchSystem must not be switched off during vacuuming.

CARE INSTRUCTIONS

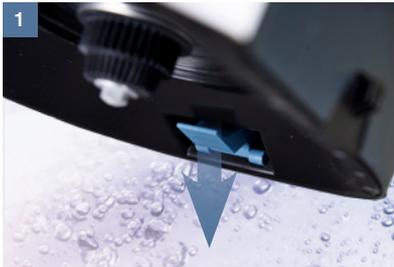

Please take the following steps:

1. Disconnect the power plug first.
2. Empty the dirty water from the water tank, then clean the water tank with the special NewTouchSystem cleaning cloth.
3. Clean the bottom of the motor head with the special NewTouchSystem cleaning cloth (damp) and dry it.
4. Remove the screw and the separator, clean it thoroughly and put it back on. Make sure that the separator engages correctly in the guide notch and secure it with the nut.
5. Do not close the NewTouchSystem completely. For complete dehumidifying you need to flip out the distance clip on the bottom side of your machine (Fig. 1). Then place the main unit on the water tank to leave a small gap between main unit and water tank (Fig. 2).
6. Flip in this clip and attach the handle of the water tank before using your NewTouchSystem again.



IMPORTANT:

Never place your NewTouchSystem filled with water or leave it in damp condition.

The background of the slide is a solid light blue color with a pattern of numerous small, semi-transparent water droplets of varying sizes scattered across the surface. The droplets have a slight gradient, giving them a three-dimensional appearance.

ADDITIONAL ACCESSORIES

SPECIAL ACCESSORIES



Mechanical hand turbo nozzle (air drive)

This is suitable particularly for easy and thorough cleaning of upholstery and other textile surfaces.



Manual turbo nozzle (electric drive)

Even more powerful thanks to electric drive. Ideal for particularly easy and thorough cleaning of upholstery, etc.



Natural hair dusting brush

The dust brush is suitable for cleaning plants and other delicate objects. Attach the dust brush directly on the handle and open the air control for extra gentle vacuuming.



Drain adapter

With the blowing function of the NewTouchSystem, the drain adapter offers the possibility of removing blockages in drains yourself.



Stain remover

This cleaning agent removes the most stubborn stains. Spray on, allow it to act briefly and vacuum up with the spray extraction kit or the upholstery nozzle with the standard hose.



Tube extension

The tube extension can be attached to the telescopic tube and adapts specifically to your height. It measures exactly 348 mm.

SPECIAL ACCESSORIES



Fragrance oils

With our fragrance oils you can aromatise the air in the room as you wish.

Essential oils:

Orange / Eucalyptus / Lemon



Water soluble oils:

Cucumber & Mint / Lavender / Spruce Needle



Fragrance box

Our fragrance box contains 6 different fragrance oils including the Eco CleanAir®. It is a great set which is packed in an attractive gift box.



Multifunction attachment

This attachment is optimal for wet cleaning of all smooth floor coverings. It can only be used in combination with reversible floor nozzle & microfiber cloth with Velcro fastener.



Microfiber cloth for switchable floor nozzle

This microfiber cloth is optimal for wet cleaning of all smooth floor coverings. It can only be used in combination with switchable floor nozzle & multifunction attachment.



Window cleaner

This window cleaner enables to clean thoroughly all window surfaces without cleaning agents (only in conjunction with spray extraction kit, see page 38).

SPECIAL ACCESSORIES




Squeegee

Ideal for wet cleaning smooth surfaces such as tiles, PVC, linoleum, etc. (Only in conjunction with spray extraction kit, see page 38).



Mattress beater

With this mattress beater, you can clean your mattress neither using chemical cleaning agents nor damaging your mattress.

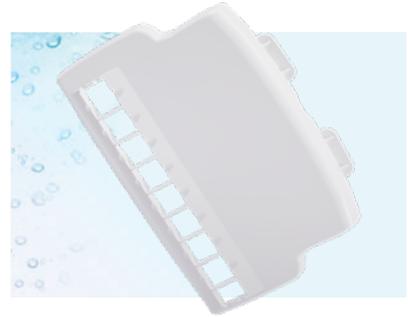

Hygiene & mattress shoe

The hygiene and mattress shoe makes it ideal to clean mattresses without soiling or damaging them after cleaning the floor.

airvenue®

THE AIR FRESHENER

For all those who value clean and fresh air, especially allergy sufferers, the airvenue® air freshener would be your first choice.

Dirty air is vacuumed up by the airvenue®. Dust, suspended particles and dirt are then bound in the water and then purified air exits again!

In nature, rain provides a pleasant and fresh air. The rain simply washes the pollutants out of the air! The same principle applies to the airvenue® air freshener.

The permanent enrichment of the ambient air with humidity also has the advantage of the respiratory tract, mucous membranes and eyes protection.

The airvenue® air freshener is easy to operate. Simply fill the glass container with enough water, turn on the control unit and it will clean your room air by itself.



SPECIAL ACCESSORIES: ELECTRIC NOZZLE DIRECT CONTACT



Technical Data

Voltage	230 V 50 Hz
Power	150 Watt

1. Electric nozzle (only suitable for dry vacuuming)
2. Telescopic tube for electric nozzle (stainless steel)
3. NewTouchSystem electric hose (two-tone, only suitable for dry vacuuming)



Please use this setting for vacuuming with the power nozzle.

Note

Please use the NewTouchSystem electric nozzle and the electric hose only for dry vacuuming!

BASIC FUNCTIONS OF THE ELECTRIC NOZZLE

Using the electric nozzle

The NewTouchSystem Power Nozzle is particularly suitable not only for the heavily used carpets and rugs (e.g. for hallways), but also for upholstery and mattresses.

Needless to say, the NewTouchSystem electric nozzle can also be used to vacuum hard floors. Switch off your NewTouchSystem. Plug the cable of the electric hose into the provided connection for this purpose (see components).

Switch on the NewTouchSystem. Operate the release mechanism and bring the telescopic tube into an inclined position. The motor will now start automatically.

If the telescopic tube is returned to a vertical position, the motor will switch off.

Electric nozzle overload protection

If the motor is overloaded, e.g. if bulky unsuitable objects or carpet fringes are stuck in the brush roller, a resettable overload protection will automatically switch off the motor for your safety.

The red warning light will turn on. Should this happen, please proceed as follows:

- Switch off the Power Nozzle and disconnect the main plug of the NewTouchSystem from the socket.
- Eliminate the cause of the problem, clean the brush roller if necessary.
- Put the electric nozzle back into operation.

Care of the electric nozzle

Disconnect the power plug of the nozzle & remove any clogged hair and carpet fibres with the crevice nozzle.

SPECIAL ACCESSORIES: SPRAY EXTRACTION KIT

Technical Data

Fresh water tank	2 litres
-------------------------	----------



Note
Use only cleaning agents recommended by the manufacturer!

1. Large carpet nozzle
2. Stainless steel pipes
3. Extraction hose
4. Handle
5. Small upholstery nozzle
6. Fresh water tank
7. Fresh water line suction hose
8. Cleaning agent 250 ml

BASIC FUNCTIONS OF THE SPRAY EXTRACTION KIT



With this specifically developed spray extraction kit, you can achieve a particularly high level of cleaning for heavily soiled upholstery or carpets.

The cleaning concentrate is sprayed onto the upholstery or carpet with pressure and it binds the dirt.

The large amount of air flow now reabsorbs the moisture along with the contamination. Most stubborn stains and stuck dirt can be loosened and removed this way.

Recommended position when using the spray extraction kit: "MAX".

BASIC FUNCTIONS OF THE SPRAY EXTRACTION KIT



Note

When using the spray extraction kit, DO NOT fill the water in the tank of the NewTouchSystem at the beginning.

- 1.** Pour in room temperature tap water with 2-3 capfuls of cleaning agent and reassemble the cap on the cleaning agent bottle.
(Attention: Perform a color fastness test in an unnoticeable area on all surfaces such as carpets, upholstery, etc. beforehand.)
- 2.** Remove the aerosol filter on the rear side of the main unit and attach the fresh water tank into the gap and make it stable by pressing the top side against the main unit.
- 3.** Press the fresh water line from the suction hose firmly into the other side of the fresh water tank. Now press the power button and thorough cleaning will begin. Use "MAX" power (double tap on display - see previous operating instructions on display).

NOTES





NTS
NEW TOUCH SYSTEM



NTS

NEWTOUCHSYSTEM

Technologiepark 6
91522 Ansbach/Germany
Tel. +49 (0) 981/48788-0
Fax +49 (0) 981/48788-99



NTS

NEW TOUCH SYSTEM

دليل المستخدم

تطبيق الهاتف الذكي
متاح على:



QUALITY MADE IN
GERMANY

NTS

NEW TOUCH SYSTEM

الشركة المصنعة

شركة برو-أكو إيترنال ش.ذ.م.م
المجمع التكنولوجي 6
91522 آندباخ/ ألمانيا

الهاتف: +49 (0) 981 /48 78 8-0
الفاكس: +49 (0) 981 /48 78 8-99



PRO-AQUA
www.pro-aqua.com

النوع: Pro-Aqua NTS Σ 800 W
650 W 220 - 240 V
150 W 50Hz/60Hz

Serial-Nr.:
NTS100001

الشركة المصنعة: شركة برو-أكو إيترنال ش.ذ.م.م
المجمع التكنولوجي 6، 91522 آندباخ/ ألمانيا

NTS1234567890

فهرس المحتويات

1 - المعلومات العامة

تعليمات السلامة

الوصف العام

الملحقات القياسية

تعليمات التجميع

الإعداد

2 - الوظائف

الوظائف الأساسية

التشغيل عبر الشاشة أو التطبيق

الوظائف الأساسية

الملحقات القياسية

الوظائف الأخرى

التنظيف الرطب

وظيفة النفخ

التنظيف بالشفط

تعليمات العناية

3 - الملحقات الاختيارية

الملحقات

الملحقات الخاصة

جهاز تنقية الهواء @airvenue

فوهة التنظيف المباشر الكهربائي

مجموعة بخاخ التنظيف والشفط

3

2

1

تعليمات السلامة

يُرجى قراءة التعليمات بعناية قبل تشغيل نظام تنظيف الغرف NewTouchSystem.

لا تستخدم نظام تنظيف الغرف NewTouchSystem إلا للأغراض الموضحة في دليل المستخدم هذا. استخدم الملحقات أو المستهلكات أو قطع الغيار المقدمة من الشركة المصنعة فقط. تنصح الشركة المُصنعة بعدم استخدام معدات إضافية؛ فقد تكون خطرة.

تحذير - للوقاية من مخاطر الحريق أو الصعق الكهربائي أو الإصابات:

1. احرص دوماً على فصل قابس الطاقة قبل البدء في تنظيف نظام تنظيف الغرف وتجفيفه.
2. لا تستخدم نظام تنظيف الغرف دون الفاصل.
3. لا تستخدم نظام تنظيف الغرف دون ماء.
4. في حال الاتساخ الشديد، ينبغي تغيير الماء في الوقت المناسب.
5. نظّف نظام تنظيف الغرف والفاصل على فترات منتظمة.
6. لا يُسمح للأطفال بالعبث بنظام تنظيف الغرف. يجب ألا يسمح للأطفال بالتنظيف دون إشراف. ينبغي الإشراف الدقيق عند استخدام الجهاز من قِبل الأطفال أو بالقرب منهم.
7. لا يُستخدم جهاز تنظيف الغرف لتنظيف المواد التي لا تتحد مع الماء. لا تستخدم نظام تنظيف الغرف لكنس كميات كبيرة من الغبار المعدني، أو السخام، أو الجبس، أو مخلفات أعمال التشييد.... إلخ. لا تستخدم الجهاز لكنس كميات كبيرة من التراب المتراكم.
8. لا تستخدم نظام تنظيف الغرف للتخلص من السوائل القابلة للاشتعال أو الاحتراق مثل البنزين، ولا تستخدمه في المناطق التي تشتمل عليها!
9. لا تستخدم النظام للتخلص من الأجسام الصلبة أو ذات الحواف الحادة.
10. لا تستخدم النظام للتخلص من السجائر، أو الكبريت، أو الرماد الساخن، أو ما إلى ذلك من المواد الدخانية أو المحترقة.
11. لا تستخدم نظام تنظيف الغرف إذا كان السلك تالفاً.
12. لا تترك نظام تنظيف الغرف متصلاً بالكهرباء. انزع القابس من منفذ الكهرباء في حال عدم الاستخدام. أغلق جميع أزرار التحكم قبل فصل الكهرباء.
13. التزم بدليل المستخدم ولا تستخدم إلا الملحقات الأصلية المعتمدة.

تعليمات السلامة

14. لا تغمر النظام في الماء للتنظيف.
15. العزل المزوج - لا تستخدم لإقطع الغيار المطابقة عند الاستخدام.
16. يأتي نظام تنظيف الغرف بعزل مزوج. استخدم فقط قطع الغيار المطابقة. انظر تعليمات صيانة الأجهزة ذات العزل المزوج.
17. يحتوي الخرطوم على أسلاك كهربائية. لا تستخدمه في حال وجود تلف أو قطع أو ثقب.
18. لا يُستخدم في الأماكن الخارجية. للاستخدام المنزلي فقط.
19. يُرجى إعادة نظام تنظيف الغرف إلى مركز الصيانة إذا لم يكن يعمل كما ينبغي أو في حال سقوطه أو تلفه أو تركه خارج المنزل أو سقوطه في الماء.
20. لا تشد السلك ولا تحمل نظام تنظيف الغرف من السلك. لا تستخدم السلك كمقبض لحمل الجهاز، واحذر من قفل الباب على السلك أو سحب السلك حول الحواف الحادة. احذر من دهس السلك بنظام تنظيف الغرف. أبقِ السلك بعيداً عن الأسطح الساخنة.
21. تجنّب شد النظام من سلك التيار الكهربائي. لفصل النظام عن مصدر التيار، أمسك القابض واسحبه خارج منفذ التيار الكهربائي وليس السلك.
22. لا تضع القابض في المقبس أو تشغل نظام تنظيف الغرف ويداك مبللتان.
23. لا تضع أي أجسام داخل الفتحات الرئيسية للوحدة. لا تستخدم نظام تنظيف الغرف في حال انسداد أي من فتحاته، وحافظ على نظافة الفتحات من الغبار، والوبر، والشعر، وأي شيء قد يقلل من تدفق الهواء.
24. أبقِ الشعر، والملابس الفضفاضة، والأصابع، وجميع أجزاء الجسم بعيدة عن الفتحات والفرش أو القطع المتحركة.
25. توخّ الحذر الشديد عند تنظيف السلام.
26. احرص دوماً على إيقاف تشغيل نظام تنظيف الغرف قبل توصيل أو فصل الخرطوم أو الفوهة الآلية.
27. افصل النظام عن الكهرباء قبل توصيل رأس التنظيف الآلي.
28. يجب فحص الخرطوم بصفة دورية بحثاً عن علامات الاهتراء مثل: الكشط والخدوش، والتشققات، وما إلى ذلك.
29. يُستخدم الخرطوم فقط في تنظيف السجاد داخل المنزل وباستخدام حل التنظيف المُوصى به من قِبَل الشركة المُصنّعة فقط. احتفظ بهذه التعليمات.
30. لا تتحمل الشركة المُصنّعة أي مسؤولية عن التلف الناتج عن الاستخدام الخاطئ أو المخالف للتعليمات، أو عمليات الإصلاح غير المُصرح بها، أو الصيانة غير السليمة.

تعليمات السلامة الإضافية

ملاحظة بشأن حماية البيئة



عند التخلص من المنتج في نهاية عمره التشغيلي، يجب عدم إلقائه مع النفايات المنزلية العادية، بل يُنقل إلى نقطة تجميع لإعادة تدوير الأجهزة الكهربائية والإلكترونية.

المواد المستخدمة في المنتج قابلة لإعادة التدوير وفقاً لما هو مذكور على الملصقات.

من خلال إعادة استخدام الأجهزة القديمة أو إعادة تدويرها أو الاستفادة منها بطريقة أخرى، فإنك تقوم بدور مهم في حماية البيئة. من فضلك، اسأل السلطات المحلية عن النقطة المخصصة للتخلص من الأجهزة بطريقة مسؤولة.

يمكن للأطفال الذين يبلغون 8 أعوام أو أكثر، والأشخاص الذين يعانون من اضطرابات في القدرات البدنية أو الحسية أو العقلية، أو الأشخاص الذين تنقصهم الخبرة والمعرفة استخدام هذا الجهاز بشرط أن يكون ذلك تحت الإشراف المباشر أو من خلال إعطائهم التعليمات المتعلقة باستخدام الجهاز بطريقة آمنة وتوضيح المخاطر التي ينطوي عليها استخدامه.

لا يُسمح للأطفال باللعب بالجهاز. يُحظر تنظيف النظام وصيانته من قِبَل الأطفال دون إشراف.

إذا تلف سلك الكهرباء، يجب استبداله عن طريق الشركة المُصنِّعة، أو مركز خدمة العملاء التابع لها، أو الأشخاص المؤهلين بمستوى الكفاءة نفسه؛ وذلك لتجنُّب أي مخاطر.

تنبيه


لتجنُّب الصدمات الكهربائية، لا تُعرض النظام للمطر! لا تحفظ النظام ولا تستخدمه في منطقة مفتوحة!

نوع مخصص للاستخدام المنزلي



عزل مزدوج

عملينا العزيز،

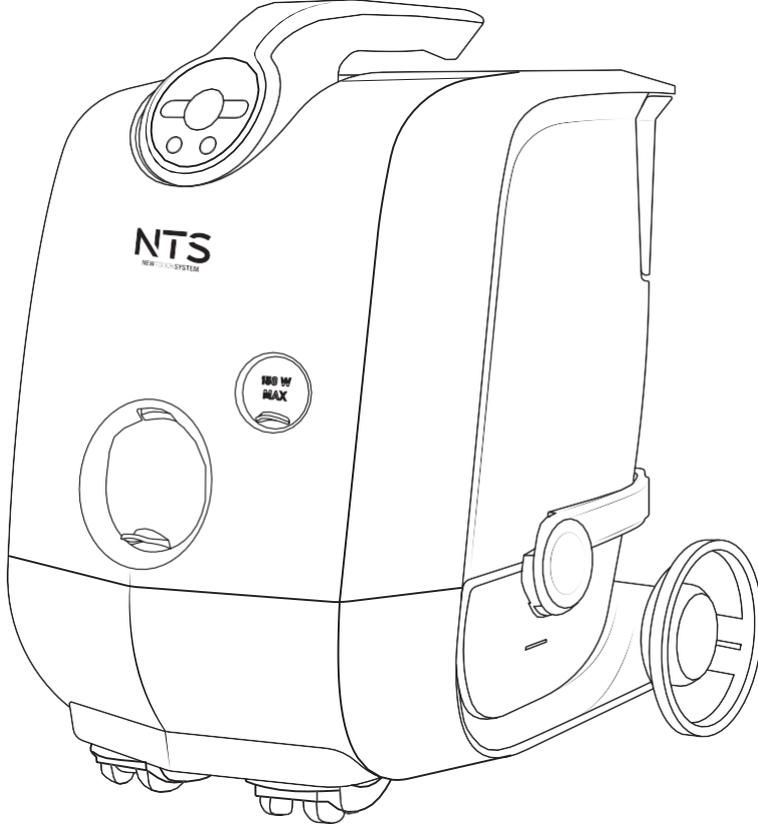

نهنك على اقتناء نظام NewTouchSystem.

لقد اشتريت منتجاً يجمع بين المواصفات الفنية المثالية والكفاءة الوظيفية من جهة وسهولة الاستخدام والتصميم العصري من جهة أخرى.

يُرجى قراءة التعليمات والنصائح الواردة في دليل المستخدم بعناية للاستمتاع باستخدام نظام تنظيف الغرف

NewTouchSystem

لفترة زمنية طويلة.

الوصف العام

البيانات الفنية

النوع	NewTouchSystem
لحيد	220 - 240 فولت 60/50 هرتز
القدرة	ثلاثة مستويات للطاقة 650 وات
الأبعاد الخارجية	30 × 41 × 45 سم تقريباً (طول × عرض × ارتفاع)



الوحدة الرئيسية للجهاز

1. شاشة لمس بمفتاح تشغيل/ إيقاف، وتحكم في المحرك، وموقت، وخاصية تغيير اللون
2. الوحدة الرئيسية، والفاصل، وصامولة التنثيث (سن يساري اللولية)
3. مقيس مع غطاء منزلق
4. غطاء منزلق لفتحة مدخل الهواء الخاصة بفوهة الشفط
5. خزان ماء مع مقبض للحمل والإغلاق
6. هيكل
7. درج ملحقات
8. فلتر الجزيئات العالقة في الهواء القابل للفصل مع مخرج هواء إضافي
9. وحدة السحب واللف الآلي للكابل
10. جهاز فتح الخزان



الملحقات القياسية



1. فوهة تنظيف مفروشات شفافة
2. فرشاة غبار قابلة للدوران
3. خرطوم شفط بطول 4 أمتار مع إمكانية التحكم في تدفق الهواء
4. فلتر الجزيئات العالقة في الهواء
5. قطعة قماش من الألياف الدقيقة لنظام NewTouchSystem
6. بخاخ تنقية الهواء Eco CleanAir 100 مل
7. فوهة الشقوق
8. أنبوب مزود بطرف نافخ
9. مفتاح الفاصل
10. أنبوب تلسكوبي مصنوع من الفولاذ المقاوم للصدأ

الملحقات الخاصة للدول الأخرى

يأتي الملحق القياسي مرفقاً بإحدى الفوهات التالية المختارة حسب موقع توصيل منتجك. صُممت الفوهات بعناية لتلبية الاحتياجات الخاصة بالدول التي يُباع فيها المنتج. يمكن شراء جميع الفوهات الأخرى بشكل منفصل عن طريق مستشارك الشخصي.



فوهة أرضيات قابلة للتبديل

تُعد فوهة الأرضيات القابلة للتبديل مناسبة بشكل خاص لتنظيف الأسطح الملساء والسجاد. يمكن تبديلها بسهولة لتتناسب الأرضيات الصلبة أو السجاد.



مكنسة مصنوعة من الشعر الطبيعي

الكنس والمسح في آنٍ واحد! المكنسة ذات الشعر الطبيعي هذه تقوم بمهمتين في مهمة واحدة؛ وذلك لأن المكنسة الكهربائية تقوم بتنظيف أثر جميع جزيئات الأوساخ التي تتخلص منها في الوقت نفسه.



فوهة أرضيات 285

تُستخدم فوهة الأرضيات 285 بشكل أساسي للتنظيف الشامل واللطيف للأرضيات الملساء والسجاد الناعم.

تعليمات التجميع

التخزين في درج الملحقات

خزّن جميع الملحقات الأساسية الخاصة بك مباشرة في جهازك. مساحات خاصة مسبقة الصنع للملحقات التالية:

1. فوهة تنظيف مفروشات شفقة
2. فرشاة غبار قابلة للدوران
3. مفتاح الفصل
4. فوهة الشقوق
5. فلتر الجزيئات العالقة في الهواء
6. الزيوت العطرية (خيارات شراء إضافية)



تركيب الخرطوم بالأنبوب التلسكوبي

ركّب خرطوم الشفط البالغ طوله 4 أمتار بالأنبوب التلسكوبي المصنوع من الفولاذ المقاوم للصدأ.



تركيب الجانب الآخر من خرطوم الشفط في فتحة مدخل الهواء
وصّل الجانب الآخر من خرطوم الشفط الذي يبلغ طوله 4 أمتار بمدخل الهواء الموجود تحت الغطاء المنزلق للوحدة
الرئيسية.



توصيل الجهاز بمقبس الطاقة
وصّل مصدر الإمداد بالطاقة الموجود بنظام تنظيف الغرف NewTouchSystem
بمقبس الطاقة.

رفع الوحدة الرئيسية

اضغط برفق على مقبض خزان الماء و ارفع الوحدة الرئيسية.



رفع خزان الماء عن الهيكل

ضع مقبض الحمل الخاص بخزان الماء في اتجاه الأعلى واضغط على زر التحرير الموجود على الهيكل لرفع خزان الماء.



ملء الخزان بالماء

1. املاً الخزان بمقدار لترين من الماء حتى العلامة، هذه هي كمية الماء التي يحتاج إليها نظام تنظيف الغرف NewTouchSystem للقيام بجميع الوظائف.
2. تأكد من تثبيت الفاصل بشكل صحيح.



ملاحظة

يُرجى إعادة تجميع الأجزاء الفردية لنظام تنظيف الغرف NewTouchSystem الخاص بك بترتيب عكسي:

1. ركب خزان الماء المملوء في الهيكل
2. ضع مقبض الحمل لخزان الماء لأسفل
3. أدخل الوحدة الرئيسية حتى يستقر زر التحرير، ثم ارفع مقبض الحمل الخاص بخزان الماء حتى تسمع صوت طقطة

التشغيل عبر شاشة اللمس

التحكم في الطاقة والحد الأقصى منها

عندما تلمس مفتاح «الطاقة»-على الشاشة، سيبدأ الجهاز في التشغيل عند أدنى مستوى. لتغيير مستوى الطاقة، كل ما عليك فعله هو الضغط على المفتاح «+» أو المفتاح «-». ملاحظة: للحصول على أقصى قدر من الطاقة (المعروضة بأشرطة زرقاء على الجانب الأيمن)، انقر نقرأ مزدوجاً على المفتاح «+». عادة ما يكون هذا ضرورياً عند استخدام النظام في عمليات التنظيف الرطب.



وظيفة المؤقت

اضغط على مفتاح الساعة الموجود في الجزء السفلي الأيسر لبدء مؤقت مدته 20 دقيقة. سيتوقف الجهاز تلقائياً بعد 20 دقيقة. سيتم تشغيل الإضاءة في الوقت نفسه. لاختيار اللون المفضل لديك، راجع الخطوة التالية.



وظيفة تغيير لون الإضاءة

اضغط على مفتاح الإضاءة في أسفل اليمين لتشغيل وضع الضوء. في هذا الوضع سوف تظهر مجموعة متنوعة من الألوان في دورة لانهائية. لاختيار لون معين، انتظر حتى يظهر اللون المفضل لديك ثم اضغط على مفتاح الإضاءة مرة أخرى.



التشغيل عبر التطبيق

تنزيل التطبيق

نزّل التطبيق من App Store أو Google Play وشغّل نظام تنظيف الغرف NewTouchSystem الخاص بك بسهولة من خلال التطبيق.



استخدام التطبيق / الاقتران

من خلال تشغيل تطبيق N.T.S على جهازك، سيتصل جهازك تلقائياً، وستعرض شاشة جهازك المحتويات نفسها الموجودة على شاشة نظام NewTouchSystem الخاص بك.



ملاحظة

تشبه الوظائف الموجودة في التطبيق تلك التي تظهر على الشاشة (انظر الصفحة على اليسار).

الوظائف الأساسية لنظام تنظيف الغرف NEWTOUCHSYSTEM

وظيفة تنقية الهواء

1. ضع نظام تنظيف الغرف NewTouchSystem الخاص بك داخل الغرفة واتركه يعمل لبضع دقائق أو أكثر، حسب حجم الغرفة. سيعمل نظام NewTouchSystem في هذا الوقت على تنظيف جميع الروائح الكريهة وجزيئات الغبار من هواء الغرفة، وتنقيتها بلءاء، ثم بخرج الهواء المُنقى حديثاً عبر منفذ الهواء.
2. يمكنك إضافة بضع قطرات من الزيت العطري إلى الماء الموجود في الخزان حسب رغبتك، وستمتلئ غرفتك بالروائح الطيبة بعد مدة قصيرة من الوقت. للحصول على تنقية لطيفة للهواء، نوصيك بضبط الإعداد على المستوى الأول من الطاقة.



طريقة استخدام الملحقات القياسية



فوهة تنظيف مفروشات شفافة

الملحق الصغير والمثبت هذا مناسب لجميع الأسطح الناعمة والمقاومة للخدش (مثل: المفروشات، والستائر، وما إلى ذلك). يسمح بعملية الكنس والتنظيف في الأماكن التي يصعب الوصول إليها دون أي إعاقة للحركة.



فرشاة غبار قابلة للدوران

فرشاة الغبار القابلة للدوران مثالية لتنظيف لوحات مفاتيح الكمبيوتر والأجسام الصلبة الأخرى. ضع فرشاة الغبار على المقبض وافرك السطح بلطف. تسمح الفرشاة الغبار ومن ثم يمكنك القيام بعملية الكنس بسهولة.



فوهة الشقوق

هذا الملحق يُسهّل عليك تنظيف الأماكن الضيقة التي كان من الصعب الوصول إليها من قبل.

طريقة استخدام الملحقات القياسية



أنبوب مزود بطرف نافخ

الطرف النافخ هذا مناسب بشكل خاص لنفخ المراتب أو المسابح الهوائية أو ما شابه، ومع وجود الخرطوم الرفيع جداً الذي يتسم بالمرونة، يصبح الجهاز مثاليًا لتنظيف المبادلات الحرارية أو الأماكن التي يصعب الوصول إليها.



قماش من الألياف الدقيقة

هذا القماش المصنوع من الألياف الدقيقة العالي الجودة مخصص للاستخدام في جميع أغراض التنظيف الجاف والرطب، بما في ذلك تنظيف خزان الماء الخاص بنظام تنظيف الغرف NewTouchSystem.



مفتاح تنظيف

يُستخدم مفتاح الربط والفك لفك البرغي من الفاصل قليلاً بحيث يمكن إزالة الفاصل مع البرغي وتنظيفه (تنبيه: سن يساري الولاية).

التنظيف الرطب

استخدم خزان ماء فارغاً واشفط الماء باستخدام خرطوم نظام NewTouchSystem الجاف (الشكل 1) وذلك لتنفيذ إجراء التنظيف الرطب.

تأكد من عدم الإفراط في ملء خزان الماء!

بعد كل عملية تنظيف رطب، يلزم تنظيف الخرطوم وتجفيفه. للقيام بذلك، اشفط الماء التنظيف، ثم وصل الخرطوم بمخرج الهواء وأدخل المقيض في مقيس الشفط. الآن دع نظام NewTouchSystem يعمل لمدة 2 - 3 دقائق تقريباً؛ حيث يساعد هذا الأمر في تجفيف الخرطوم (الشكل 2).

بعد ذلك، يصبح الجهاز مستعداً لأداء جميع الأعمال الأخرى مجدداً. يُوصى بالضغط على وضع "MAX" للتنظيف الرطب باستخدام نظام NewTouchSystem (الشكل 3).



ملاحظة مهمة:

لا تستخدم فوهة الطاقة وخرطوم الطاقة (الملحقات) لامتصاص الماء!

وظيفة النفخ

إنها مثالية للنفخ في المصارف المسدودة أو تجفيف المواد. افتح شبكة مخرج الهواء في الخلف ووصل خرطوم الشفط بفتحة المخرج هذا (الشكل 1)!



تنظيف بالشفط

ضع العناصر التي ترغب في تنظيفها، مثل: الوسائد، والألحفة ودمى الحيوانات المحشوة، وما إلى ذلك، في كيس التنظيف بالشفط، ثم وصل فوهة المفروشات، وشغّل نظام NewTouchSystem، ثم أفرغ الهواء بالكامل. الآن أزل الخرطوم ووصله بمخرج الهواء (وظيفة النفخ). انفخ الهواء النقي في كيس التنظيف - عندها ستنبعث رائحة الغسيل العطرة مرة أخرى (الشكل 2)!




ملاحظة مهمة:

يجب ألا يتم إيقاف تشغيل نظام تنظيف الغرف NewTouchSystem أثناء عملية الكنس.

تعليمات العناية

يُرجى اتباع الخطوات التالية:

1. افصل قابس الطاقة أولاً.
2. أفرغ خزان الماء من الماء غير النظيف، ثم نظّف الخزان باستخدام قطعة قماش التنظيف الخاصة بنظام تنظيف الغرف NewTouchSystem.
3. نظّف الجزء السفلي من رأس المحرك باستخدام قطعة قماش التنظيف الخاصة بنظام تنظيف الغرف NewTouchSystem (الرطبة) ثم جفّفه.
4. أزل البرغي والفاصل، ثم قم بتنظيف الفاصل جيداً وأعد تركيبه مرة أخرى. تأكد من تشويق الفاصل بشكل صحيح في حز التوجيه وثبته في الصامولة.
5. لا تغلق نظام تنظيف الغرف NewTouchSystem تماماً. للتخلص من الرطوبة تماماً ينبغي أن تسحب مشبك المبادعة الموجود أسفل الجهاز (الشكل 1). ثم ضع الوحدة الرئيسية على خزان الماء بحيث تترك مساحة صغيرة بين الوحدة الرئيسية وخزان الماء (الشكل 2).
6. ادفع المشبك للداخل وركّب مقبض خزان الماء قبل استخدام نظام تنظيف الغرف NewTouchSystem مرة أخرى.

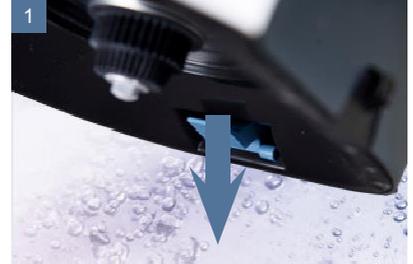

ملاحظة مهمة:

يُحظر استخدام نظام تنظيف الغرف NewTouchSystem وهو ممتلئ بالماء أو تركه رطباً.

الملحقات الخاصة



فوهة ميكانيكية يدوية تربو (دفع هوائي)

مناسبة بصفة خاصة للتنظيف الشامل للمفروشات والأسطح الأخرى المكسوة بالنسيج بسهولة ودقة.



فوهة يدوية تربو (دفع كهربائي)

تنظيف أقوى بفضل الدفع الكهربائي. مثالية بصفة خاصة للتنظيف الشامل للمفروشات وما إلى ذلك.



فرشاة غبار مزودة بشعيرات طبيعية

تُعد فرشاة الغبار مناسبة لتنظيف النباتات والأغراض الرقيقة الأخرى. ركب فرشاة الغبار على اليد مباشرة ثم افتح التحكم في الهواء للحصول على تنظيف لطيف للغاية.



مهايئ فتحة التصريف

يُتيح استخدام وظيفة نفخ الهواء في نظام تنظيف الغرف NewTouchSystem مع مهايئ فتحة التصريف إمكانية التخلص من انسداد أنابيب الصرف بنفسك.



مزيل البقع

مستحضر تنظيف يزيل البقع العنيدة للغاية. رش المستحضر واتركه لفترة وجيزة ليؤدي مفعوله ثم قم بشطفه باستخدام مجموعة بخاخ التنظيف والشطف أو فوهة المفروشات مع الخرطوم الأسلي.



وصلة تمديد الأنابيب

يمكن تركيب وصلة تمديد الأنابيب في الأنبوب التلسكوبي وتعديله خصيصاً ليتناسب مع طولك. يبلغ طول الوصلة 348 ملم بالضبط.

الملحقات الخاصة



الزيوت العطرية

يمكن تعطر هواء الغرفة حسب الرغبة باستخدام الزيوت العطرية.

الزيوت الأساسية:

البرتقال/ الأوكالبتوس/ الليمون



الزيوت القابلة للإذابة في الماء:

الخيار والنعناع/ اللافندر/ أوراق الشوح



صندوق الطور

يحتوي صندوق العطور على 6 زيوت عطرية مختلفة ويشمل بخاخ تنقية الهواء Eco CleanAir®. يأتي هذا الطقم الرائع مغلفاً في صندوق هدايا جذاب.



ملحق متعدد الاستخدامات

يُعد هذا الملحق مثالياً لتنظيف جميع الأرضيات الملساء المكسوة المبللة. يمكن استخدامه فقط مع فوّهة الأرضيات القابلة للتبديل وقطعة القماش المصنوعة من الألياف الدقيقة التي يتم تثبيتها بشرائط تثبيت من الفيلكرو.



قطعة قماش من الألياف الدقيقة للاستخدام مع فوّهة الأرضيات القابلة للتبديل

تُعد قطعة القماش المصنوعة من الألياف الدقيقة مثالية لتنظيف جميع الأرضيات الملساء المكسوة المبللة. يمكن استخدامها فقط مع فوّهة الأرضيات القابلة للتبديل والملحق متعدد الاستخدامات.



ملحق تنظيف النوافذ

يتيح ملحق تنظيف النوافذ التنظيف الشامل لأسطح جميع النوافذ دون الحاجة إلى مستحضرات تنظيف (يستخدم مع مجموعة بخاخ التنظيف والشفط، انظر الصفحة 38).

الملحقات الخاصة




الممسحة

مثالية لتنظيف الأسطح الملساء المبللة مثل: البلاط، والأرضيات المصنوعة من بولي كلوريد الفينيل، ومشمع الأرضيات، وما إلى ذلك. (تُستخدم مع مجموعة بخاخ التنظيف والشطف، انظر الصفحة 38).



ملحق تنظيف المراتب

يُتيح لك ملحق تنظيف المراتب تنظيف المراتب دون الحاجة إلى مستحضرات تنظيف كيميائية ودون إلحاق ضرر بها.

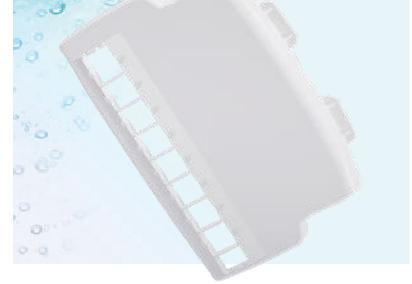

قاعدة ملحق تنظيف المراتب

تُعد قاعدة ملحق تنظيف المراتب مثالية لتنظيف المراتب بعد تنظيف الأرضية دون أن تخلف أوساخاً أو تتلف المراتبة.



airvenue®

جهاز تنقية الهواء

لكل مَنْ يقدر الوجود في أجواء نظيفة ومنعشة، ولا سيما الأشخاص المصابين بالحساسية، نقدم لكم الخيار الأول المناسب لكم، جهاز تنقية الهواء airvenue®.

يتم شفط الهواء داخل جهاز تنقية الهواء airvenue®.

ثم تتحد ذرات الغبار والجزيئات المعلقة في الهواء والأوساخ مع الماء ليعود الهواء نظياً!

في الطبيعة، يعمل المطر على تنقية وانتعاش الهواء. فالمطر ببساطة يغسل الأوساخ وينقي الهواء! ينطبق نفس المبدأ على جهاز تنقية الهواء airvenue®.

كما يعمل الجهاز على تشبع الهواء بالرطوبة على الدوام؛ مما يهيب أجواء مريحة للجهاز التنفسي والأغشية المخاطية وحماية للعينين.

يُعد جهاز تنقية الهواء airvenue® سهل الاستخدام. املاً الوعاء الزجاجي ببساطة بكمية كافية من الماء، ثم شغل وحدة التحكم وسوف يقوم الجهاز بتنظيف هواء الغرفة بمفرده.



الملحقات الخاصة: فوهة التنظيف المباشر الكهربائي



يُرجى استخدام هذا الإعداد للتنظيف باستخدام فوهة التنظيف الكهربائي.

ملاحظة

يُرجى استخدام فوهة التنظيف الكهربائي وخرطوم نظام تنظيف الغرف الكهربائي للتعطيل الجاف للتعطيل الجاف فقط!

البيانات الفنية

الجهد	230 فولت 50 هرتز
القدرة	150 وات

1. فوهة التنظيف الكهربائي (مناسبة للتنظيف الجاف فقط)
2. أنبوب تلسكوبي لفوهة التنظيف الكهربائي (من الفولاذ المقاوم للصدأ)
3. خرطوم نظام تنظيف الغرف الكهربائي للتعطيل الجاف فقط (NewTouchSystem بلونين، مناسب فقط)



الوظائف الأساسية لفوهة التنظيف الكهربائي

نظام حماية فوهة التنظيف الكهربائي من الحمل الزائد

إذا تم التحميل بشكل زائد على المحرك، مثل: انحشار الأجسام الكبيرة غير المناسبة أو شراريب السجادة في الفرشاة الدوارة، فسيعمل نظام الحماية من الحمل الزائد القابل لإعادة ضبطه على إيقاف تشغيل المحرك للحفاظ على سلامتك.

وسيتم تشغيل الضوء الأحمر لمصباح التحذير. في حال حدوث ذلك، يُرجى المتابعة على النحو التالي:

- أوقف تشغيل فوهة التنظيف الكهربائي وافصل القابس الرئيسي لنظام تنظيف الغرف NewTouchSystem من المقبس.
- تخلص من سبب المشكلة، ونظّف الفرشاة الدوارة عند الضرورة.
- شغل فوهة التنظيف الكهربائي مرة أخرى.

استخدام فوهة التنظيف الكهربائي

لا تُعد فوهة التنظيف الكهربائي لنظام NewTouchSystem مناسبة بشكل خاص لتنظيف السجاد والبسط المستخدمة بكثافة (مثل التي تستخدم في المداخل) فحسب، بل أيضاً لتنظيف المفروشات والمراتب.

وغني عن القول أن فوهة التنظيف الكهربائي لنظام NewTouchSystem يمكن استخدامها أيضاً لتنظيف الأرضيات الصلبة. قم بليقاف نظام NewTouchSystem. ضع كبل الخرطوم الكهربائي في الوصلة المرفقة المخصصة لهذا الغرض (انظر المكونات).

شغل نظام تنظيف الغرف NewTouchSystem. شغل آلية تحرير الأتيوب التذكوبي وقم بوضعه بوضع مائل. سيبدأ تشغيل المحرك الآن تلقائياً.

إذا تمت إعادة الأتيوب إلى الوضع الرأسي، فسيوقف تشغيل المحرك.

العناية بفوهة التنظيف الكهربائي

افصل القابس الكهربائي للفوهة وانزع أي كتل من الشعر أو أنسجة من السجادة من تجويف الفوهة.

الملحقات الخاصة: مجموعة بخاخ التنظيف والشفط

البيانات الفنية

2لتر

خزان الماء العذب

ملاحظة

استخدم مستحضرات التنظيف
المُوصى بها من قِبَل الشركة
المُصنعة فقط!



1. فرمة السجاد الكبير
2. أنابيب من الفولاذ المقاوم للصدأ
3. خرطوم الشفط
4. المقبض
5. فرمة تنظيف المفروشات الصغيرة
6. خزان الماء العذب
7. خط الماء العذب المتصل بخرطوم الشفط
8. مستحضر تنظيف 250 مل

الوظائف الأساسية لمجموعة بخاخ التنظيف والشطف

يمكنك من خلال مجموعة بخاخ التنظيف والشطف المصممة خصيصاً أن تحصل على مستوى عالٍ من التنظيف للمفروشات أو السجاد الشديد الاتساخ بشكل خاص. يتم رش مستحضر التنظيف المركز على المفروشات أو السجاد تحت ضغط قوي ويتحد المستحضر مع الأوساخ. ثم يصل تدفق الهواء بكمية كبيرة على إعددة امتصاص الرطوبة ومعها الأوساخ المسببة للوث. ويمكن تحلل معظم البقع العنيدة والأوساخ العالقة والتخلص منها بهذه الطريقة.

الوضع الموصى به عند استخدام مجموعة بخاخ التنظيف والشطف: "الحد الأقصى".



الوظائف الأساسية لمجموعة بخاخ التنظيف والشطف

1. املاً الخزان بماء الصنبور في درجة حرارة الغرفة وأضف مستحضر التنظيف بمقدار 2-3 غطاء ثم أعد تغطية زجاجة مستحضر التنظيف بالغطاء. (انتبه: قم بإجراء اختبار لثبات اللون مسبقاً في منطقة غير ملحوظة على جميع الأسطح مثل: السجاد، والمفروشات...الخ)
2. انزع فلتر الجزيئات العالقة في الهواء من الجانب الخلفي للوحدة الرئيسية وركّب خزان الماء العذب في الفجوة ثم ثبته بالضغط عليه من أعلى للتثبيت في الوحدة الرئيسية.
3. ثبت خط الماء العذب المتصل بخراطوم الشطف بالضغط عليه بقوة لتثبيته في الجانب الآخر من خزان الماء العذب. ثم اضغط على زر التشغيل وإبدأ التنظيف الشامل. اضبط الطاقة على وضع "الحد الأقصى" (انقر مرتين على شاشة العرض - انظر الجزء الخاص بشاشة العرض المذكور سابقاً في تعليمات التشغيل).





NTS
NEWTOUCHSYSTEM

NTS

NEW TOUCH SYSTEM

المجمع التكنولوجي 6
91522 أنسباخ/ ألمانيا

الهاتف +49 (0) 981/48788-0
الفاكس +49 (0) 981/48788-99